


Hanson Hall

Basement Floor

Emergency Evacuation
Assembly Point is in the
Courtyard by Perry Hall

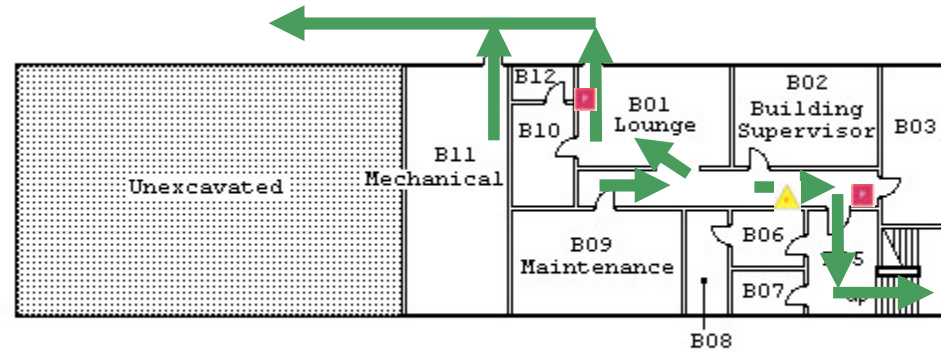


For emergency access
contact the duty staff pager at
404-533-7197 or the Campus
police at 404-894-2500.

Hanson Hall

First Floor

Emergency Evacuation
Assembly Point is in the
Courtyard by Perry Hall

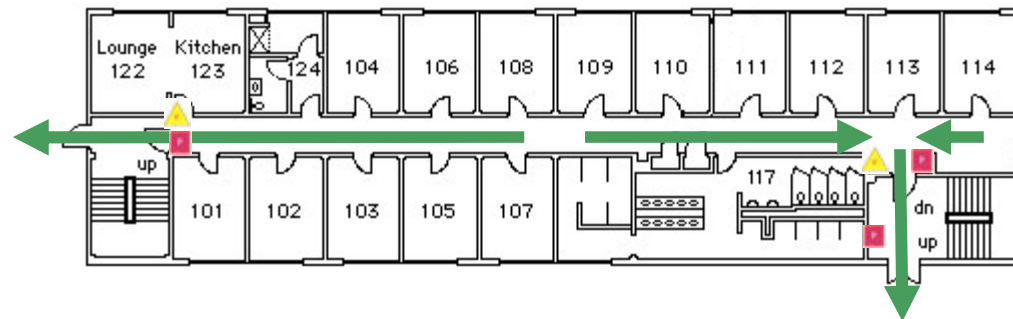


For emergency access
contact the duty staff pager at
404-533-7197 or the Campus
police at 404-894-2500.

Hanson Hall

Second Floor

Emergency Evacuation
Assembly Point is in the
Courtyard by Perry Hall

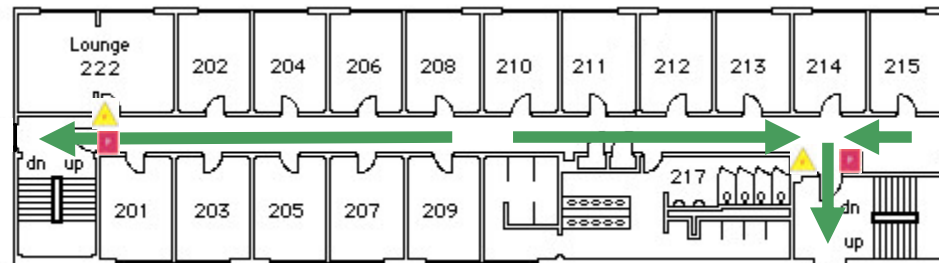


For emergency access
contact the duty staff pager at
404-533-7197 or the Campus
police at 404-894-2500.

Hanson Hall

Third Floor

Emergency Evacuation
Assembly Point is in the
Courtyard by Perry Hall

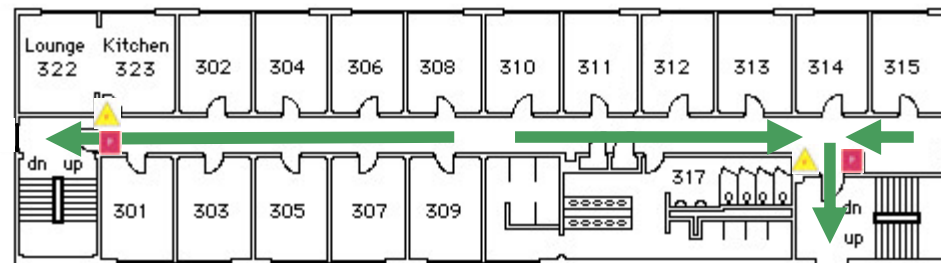


For emergency access
contact the duty staff pager at
404-533-7197 or the Campus
police at 404-894-2500.

Hanson Hall

Fourth Floor

Emergency Evacuation
Assembly Point is in the
Courtyard by Perry Hall

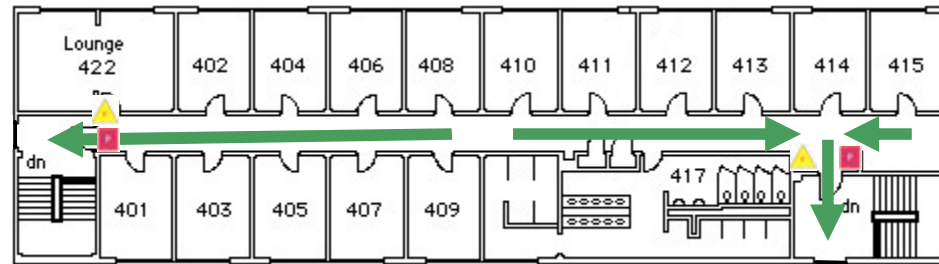

For emergency access
contact the duty staff pager at
404-533-7197 or the Campus
police at 404-894-2500.